

SRT Supplemental Instructions

Thank you for purchasing our new Elite Series pistol with Short Reset Trigger System. Please be advised that there is an additional step in field stripping your pistol equipped with an SRT system. Disregard Figure “C” in your Owner’s Manual and follow the steps listed below.

Figure – C (SRT Supplemental Instructions):

- Pull back the slide slightly to disengage the slide catch lever. Hold the slide firmly and allow it to move forward slowly.
- As the slide reaches its closed position, decock the pistol. This will allow the SRT safety lever to completely retract so the slide can be fully removed from the frame.
- Now slip the complete assembly (comprised of slide, barrel, recoil spring and guide rod) forward and off the frame.

Should you need any further support in disassembling your SRT equipped pistol, please call our Customer Service Department at 603-772-2302, extension 3.

SIGARMS, Inc.
18 Industrial Drive, Exeter, NH 03833
An ISO 9001:2000 Certified Company
Manufacturing in Exeter, New Hampshire
www.sigarms.com

SIGARMS®